



Resetting Touchscreens

PROBLEM: Resetting of touch screen to eliminate unwanted display information.

OLDER STYLE TOUCHSCREENS (8 selections along the top)

1. Press: SERVICE
2. Press: DELETE
3. Select which RAM area you would like to reset
4. Press: UP/LATER (to confirm selection)

NEW STYLE TOUCHSCREENS

1. Press: SERVICE
2. Press: DOWN/SOONER
3. Select which RAM area you would like to reset
4. Press: UP/LATER (to confirm selection)